

Thank you for buying an Angelo Decor Fountain!

We hope you will find these instructions helpful in setting up your fountain. If you need more information to properly care for your fountain, please DO NOT return the unit to place of purchase.

Please visit our web site, [www.angelodecor.com](http://www.angelodecor.com), for assistance and warranty information.

**First unpack carton carefully, arranging parts safely in your working area.**



The pump and cord seal are pre-installed. Ensure the cord seal is tight.



Feed the power cord through the bowl, riser and the base.



Align with the groove at the bottom.



Twist and lock the riser to the base.



Twist and lock the bowl to the riser.



Put the nozzle into the pump cover. (short nozzle shown)



Set the pump cover into place and make sure the nozzle is straight.



Please note: Two nozzles are included for your choice of water effect. The large nozzle is shown here and the short one is shown above.

Now simply fill with clean water and plug into a grounded GFCI outlet  
**We recommend keeping bowl 3/4 full of water to avoid pump burnout.**

Your fountain will work better, and last longer, when kept clean using a soft cloth and mild soap on a regular basis.

This item should be stored properly for harsh winters, as water left to freeze in the bowl may cause cracking, which is not covered by warranty. May we suggest you disassemble the unit for the winter months, removing pump and all water, and store in the garage or shed for best results.