

Thank you for buying an Angelo Decor Fountain!

We hope you will find these instructions helpful in setting up your fountain. If you need more information to properly care for your fountain, please **DO NOT** return the unit to place of purchase.

Please visit our web site, www.angelodecor.com, for assistance and warranty information.

First unpack carton carefully, arranging parts safely in your working area.



Set the top section upside down. Run the tubing through the plate as shown.



Fasten the plate to the top section as shown above.




Turn top section to right side up. Run the light cord through the hole in base as shown.



Place pump into reservoir.



Connect tubing to the pump. Set the top section into the reservoir as shown.

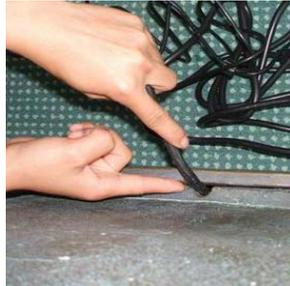

Both cords (light and pump) should run out the back of the reservoir as shown.



Install the light into place



Secure the top section to the reservoir (base) using the provided screws. Make sure they are secured.



Place the splash plate over the fountain, make sure the light can move .



Adjust the direction of light as desired.



Attach light cord to transformer. Be sure it is tight as shown. Place transformer in secure area, preferably under cover. While this unit is rated for outdoor use, it should not be fully submersed in the water.



The final assembly should look like this (including decorative rocks) →



Now simply fill with clean water and plug into a grounded GFCI outlet

We recommend keeping bowl 3/4 full of water to avoid pump burnout.

Your fountain will work better, and last longer, when kept clean using a soft cloth and mild soap on a regular basis. This item should be stored properly for harsh winters, as water left to freeze in the bowl may cause cracking, which is not covered by warranty. May we suggest you disassemble the unit for the winter months, removing pump and all water, and store in the garage or shed for best results.