

Thank you for buying an Angelo Decor Fountain!

We hope you will find these instructions helpful in setting up your fountain. If you need more information to properly care for your fountain, please **DO NOT** return the unit to place of purchase. Please visit our web site, www.angelodecor.com, for assistance and warranty information.

First unpack carton carefully, arranging parts safely in your working area.



Run cord through leg as illustrated. There is a groove in the base of the leg for the cord.



"Twist and Lock" bowl in place.



Set pump to desired setting. The cord seal is pre-installed, ensure all of the screws are tight.



Connect tubing to pump. Run tubing up through the riser.



"Twist and lock" riser in place.



Run tubing through opening in the second tier bowl.



"Twist and Lock" top bowl into place as illustrated. Trim any excess tubing at this time to prevent kinking.



Connect tubing to top piece. "Twist and lock" top piece in place.



Install optional splash guards as necessary.



Now simply fill with clean water and plug into a grounded GFCI outlet

We recommend keeping bowl 3/4 full of water to avoid pump burnout.

Your fountain will work better, and last longer, when kept clean using a soft cloth and mild soap on a regular basis. This item should be stored properly for harsh winters, as water left to freeze in the bowl may cause cracking, which is not covered by warranty. May we suggest you disassemble the unit for the winter months, removing pump and all water, and store in the garage or shed for best results.