

Thank you for buying an Angelo Décor Waterfall Kit!

 
We hope you will find these instructions helpful in setting up your kit. If you need more information to properly care for your product, please **DO NOT** return the unit to place of purchase.

Please visit our web site, www.angelodecor.com, for assistance and warranty information.

First unpack carton carefully, arranging parts safely in your working area.



Set the pond feature piece on the edge of the desired location. Ensure it is sitting in a stable location and the tubing is free.



We have included an optional decorative cover plate with this kit, which is used to hide the entry of the tubing into the pond or water feature. To attach it, simply align the tongue and groove system and slide into place (as shown above).



Locate the diverter (shown above). Unscrew the cap (top left) and then fasten the 3/4 outlet into place as shown (top right).

Fasten the diverter to the pump by turning clockwise until tight.


Select the desired nozzle and attach to the top of the diverter. The included nozzles should be assembled as shown above.



Connect the tubing from the feature using the copper connector.

Align the tubing with groove at the base if kinking is a concern.

Connect the tubing to the pump and place the pump in the center of the pond or water feature. Pump must be fully submersed. Alternatively, the pump can be attached directly to the waterfall feature for maximum flow.

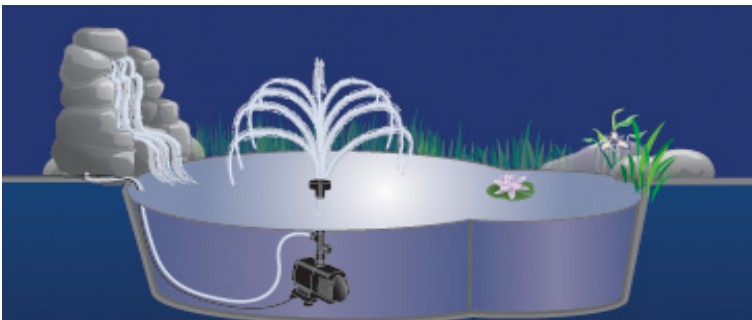

Final assembly of the entire kit with nozzle feature should look similar to the illustration

Final assembly of the waterfall should look like this

