

## Thank you for buying an Angelo Decor **Cascades Waterfall!**

We hope you will find these instructions helpful in setting up your fountain. If you need more information to properly care for your fountain, **DO NOT** return the unit to place of purchase.

Please visit our web site, [www.angelodecor.com](http://www.angelodecor.com), for assistance and warranty information.

**First unpack carton carefully, arranging parts safely in your working area.**



Place Pump in housing as shown. Run chord through pre-drilled hole and down the chord pipe provided.

Rest top of fountain on base. Run attached tubing through pre-drilled hole to the pump housing.



Using the "T" connection (provided), connect the tubing to the pump as illustrated. The remaining outlet will connect to the tubing from the outer section.

Using the remaining top section (with tube attached), feed tubing down through corresponding section and attach to remaining outlet on "T". Place assembled piece (two sections) over pump housing.



Attach final piece to fountain using tongue and groove connection as illustrated.

Finally, fill with clean water and plug into a grounded GFCI outlet

**We recommend keeping bowl 3/4 full of water to avoid pump burnout.**

Your fountain will function better, and last longer, when kept clean using a soft cloth, and mild soap when necessary, on a regular basis.

It is recommended that this item should be stored properly for harsh winters, as water left to freeze in the bowl may cause cracking, and is not covered by warranty.

It is suggested that the unit is disassembled for the winter months, removing pump and all water, and storing in a dry location.

